



## MagWrap 19

The latest innovation from the Water Magnet Technology Leader, GrowFlow.

Growflow introduces the **Magwrap 19** a must have if you have any water issues.

The Growflow **Magwrap 19** Water Conditioner is unique, portable, versatile, efficient, super strong and very affordable. The revolutionary **Magwrap 19** can be wrapped around pipe sizes up to the maximum of 19mm.



Specifically designed for domestic use the **Magwrap 19** also does a great job when watering plants and vegies with a standard hose or drip system.

The Growflow **Magwrap 19** Water Conditioner can also be placed around shower heads, taps, washing machine hose etc and the hose to your dishwasher.



If you need better results than you are getting from one Magwrap, you can increase the magnetic effect by using 2 Magwraps wrapped side by side on the pipe or hose. Turn one Magwrap a little so the magnets are staggered along the hose not in a straight line, this gives a better coverage of the magnetic field around the hose into the water. We have had great success in watering lawn and garden beds from a salty bore using 2 Magwraps.



Unit 1, 12 Jura Street Heatherbrae NSW 2324  
Tel: +61 2 4987 3912 Fax: +61 2 4987 7651  
Email: [sales@imsolution.com.au](mailto:sales@imsolution.com.au) Website: [www.growflow.com.au](http://www.growflow.com.au)



## MagWrap 19



### Installation procedure:

1. Unroll the Magwrap open to a flat sheet.
2. Note that there are 4 magnet banks in the Magwrap, 2 sets of 2 magnet banks. One set of two magnet banks is closer to each other than the second set. The closer set also has no printing between the magnet sets. The first closer set makes first contact with the pipe while the second set of magnet banks stick on top of the first set hence the need for the second set to be further apart.



a.

3. Place the flat black side without printing facing the pipe to which you wish to apply the Magwrap.
4. Make sure that the closer sets of magnets make first contact with the pipe.



a.

5. Wrap the Magwrap around the pipe. The first 2 magnet sets will be on opposite sides of the pipe.
6. Continue wrapping the Magwrap around the pipe. The 3<sup>rd</sup> magnet bank will clamp onto the 1<sup>st</sup> magnet bank securing the Magwrap to the pipe.




a.

7. Continue wrapping the Magwrap around the pipe. The 4<sup>th</sup> magnet bank will clamp onto the 2<sup>nd</sup> magnet bank securing the Magwrap to the pipe. Your done.



a.

If you decide to put a second Magwrap on the pipe just follow the above procedure for the second Magwrap then rotate the second Magwrap at 90 degrees to the first. This will give best results.

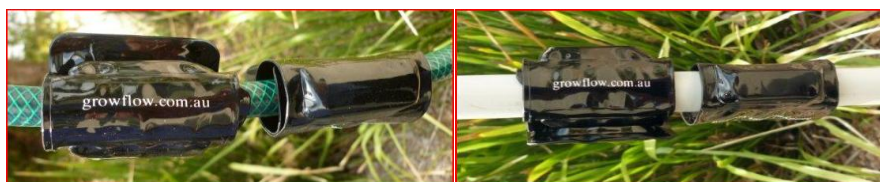

*Designed for easy application but not constructed for constant relocation.*

Unit 1, 12 Jura Street Heatherbrae NSW 2324

Tel: +61 2 4987 3912 Fax: +61 2 4987 7651

Email: [sales@imsolution.com.au](mailto:sales@imsolution.com.au) Website: [www.growflow.com.au](http://www.growflow.com.au)